

Beacon Mode

You can put message 1 in auto-repeat or beacon mode by:

- 1) Turn off the power.
- 2) Press and hold down the message 2 key.
- 3) Turn the power back on and then release the message 2 key.

Once the message 1 key is pressed, message 1 will continuously repeat until a paddle key is touched. At that point it will operate as a normal keyer. Messages 2-4 operate normally. Pressing the message 1 key will return it to Beacon Mode.

Tune

You can place the XT-4 in a key down state for tuning with the following procedure:

- 1) Press and hold the REC button.
- 2) Press the 2 button. The keyer will now be in the tune mode.
- 3) Touch either paddle key to exit tune mode.

Warranty Information

Unified Microsystems warrants the components workmanship of the XT-4 CW Memory Keyer for a period of 1 year from the date of purchase. A copy of the receipt must be included with any units returned for warranty repairs.

Unified Microsystems will, at its option, repair or replace defective units returned during the warranty period.

Unified Microsystems reserves the right to change specifications of the XT-4 at any time without notice.

Unified Microsystems

**PO Box 133
Slinger, WI 53086**

**262-644-9036
w9xt@qth.com
www.qth.com/w9xt**



XT-4 CW Memory Keyer

User's Manual Revision 1.06

Unified Microsystems

**PO Box 133
Slinger, WI 53086
262-644-9036**

**w9xt@qth.com
www.qth.com/w9xt**